

Exclusive external display for pilot / Écran externe exclusif pour pilote

Screen II allows you to follow the regularity to a tenth of a second without losing sight of the road. Using it, many pilots have achieved the precious 0.0 points in many secret controls.

Plug & Play. Connect it and you are ready to go. Always unplug when blunik is switched off.

* Only works when Blunik is connected to the car's battery.


L'écran II vous permet de suivre la régularité au dixième de seconde sans perdre de vue la route. Grâce à ceci, de nombreux pilotes ont réalisé les précieux points de 0,0 dans de nombreux contrôles secrets.

Plug & Play. Vous vous connectez et êtes prêt. Toujours débrancher avec le Blunik éteint.

* Fonctionne uniquement lorsque Blunik est connecté à la batterie de la voiture.




Screen II views/ Vues Screen II

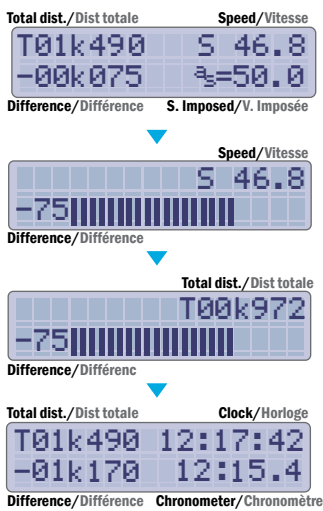

How to program the blue led/ Comment programmer le led bleu

From Blunik /Depuis le Blunik:



Blue Led/ Led bleu	30km/h	50km/h
0.2s	+/-2m	+/-3m
0.5s	+/-4m	+/-7m
1.0s	+/-8m	+/-14
2.0s	+/-16	+/-28m

Recommended!
Recommandé!

Advanced /Avance



On average /À la moyenne



Delay/Retard

